

 
# Update the SMSL MCU firmware

## Brief:


This document describes the program to upgrade the equipment MCU, not the USB program. The upgrade method is to connect the windows PC via USB to upgrade. Please be careful not to turn off the power during the upgrade!

## Steps:



- 1) Unzip files,the firmware ordinarily packed in Zip file, and the file name, for example, is "XX\_MCU\_FW.zip".
- 2) After unzip, the file is like:



- 3 ) Open the file"xx\_MCU\_Update\_XX.exe".( This software does not need to be installed).

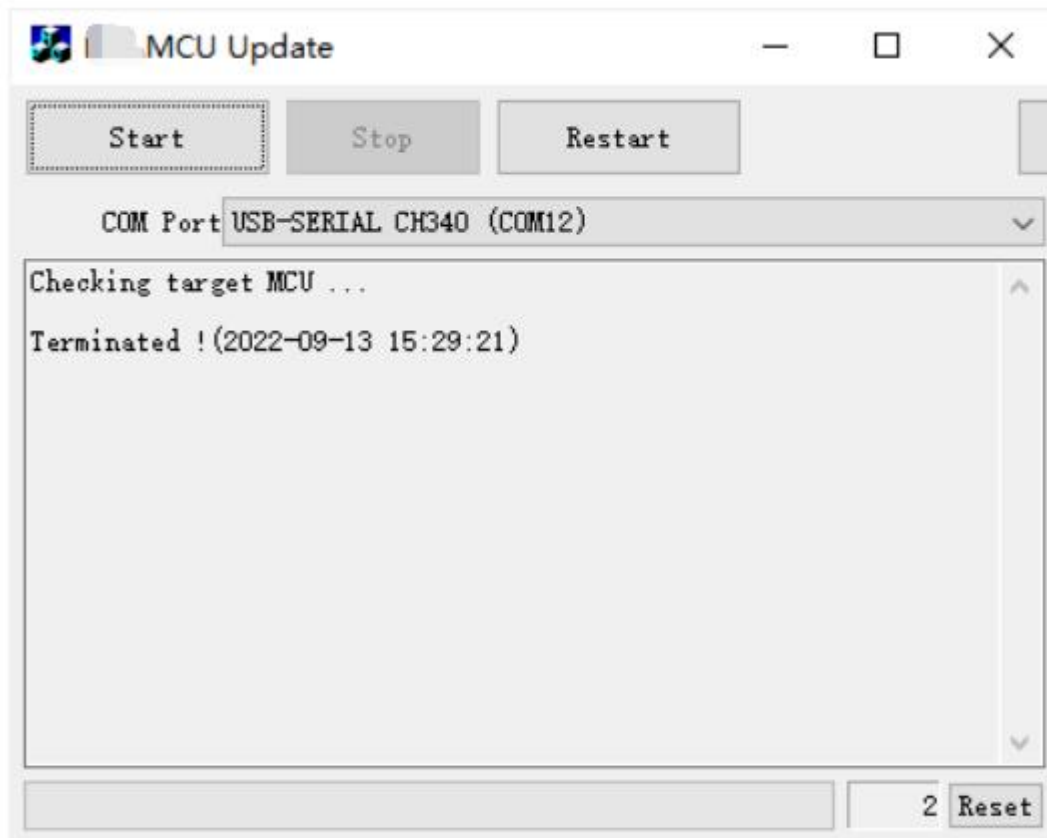

4 ) Connect the equipment to the computer via USB cable, After the equipment is turned on, long press the menu button to enter standby mode. After displaying the same information as the picture, click "Start". Finally, press the volume up button three times, waiting for the upgrade to begin.

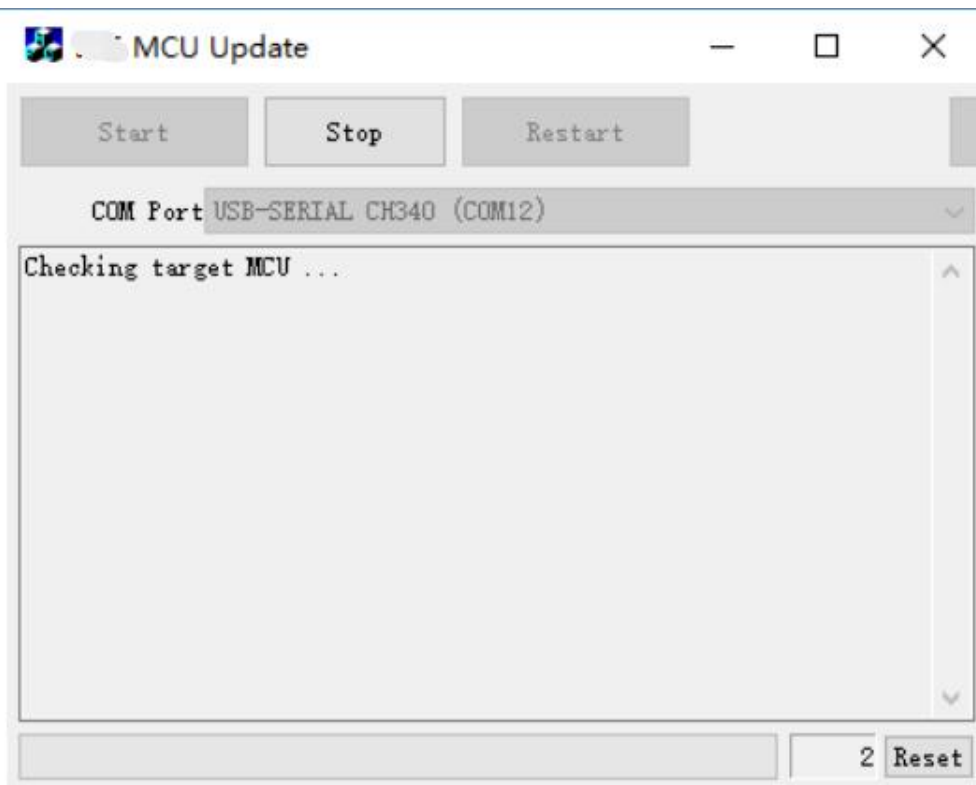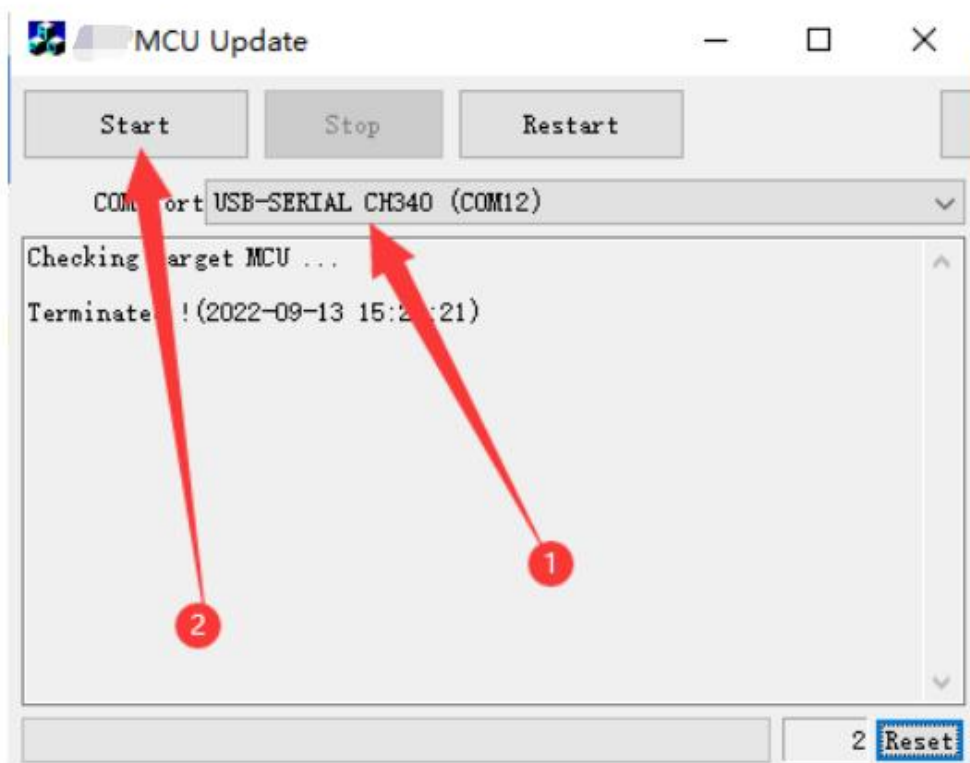

5 ) If the window shows like this, it is done! If not, please follow the steps again.

